



# Dalton

A G P R O D U C T S



## OWNER MANUAL LIQUID APPLICATOR



**DLQ SERIES LIQUID APPLICATOR**



**DLQHD LIQUID APPLICATOR**

602 E. VAN BUREN, PO BOX 70  
LENOX, IA. 50851  
PH: 641-333-4518  
FAX: 641-333-4429  
TOLL FREE: 800-342-7498  
[www.daltonagproducts.com](http://www.daltonagproducts.com)

## QUICK REFERENCE INDEX

Special Notice	2
How to Order Replacement Parts	2
Who to Contact for Help	2
<b>SAFETY SECTION</b>	
Implement Safety	3
A.A. Safety	4
<b>PRE-SEASON CHECK &amp; OFF-SEASON STORAGE</b>	5
<b>OPERATIONS SECTION</b>	
Formula to Convert Pounds per acre to Gallons per acre	6
Liquid Injector Nozzle Chart	7 & 8
<b>LOADED RADIUS OF VARIOUS TIRES</b>	9
<b>PARTS SECTION</b>	
Tongue Assmy.	10
Hub & Spindle	11
Ground Drive Assmy.	12
Nozzle – Coulter Assmy.	13
Coulter Assmy.	14
Cylinders & Hose Hook-up	15
Jack Breakdown	16
Decal Setup	17
<b>WARRANTY &amp; COMPANY POLICY</b>	18
<b>SPECIAL NOTICE</b>	

The information and suggestions in this manual will help you obtain the highest performance, dependability, and efficiency from your new DALTON AG implement.

Whether your new DALTON AG implement is delivered assembled, or unassembled, it is recommended that you become familiar with the contents of this manual. A basic understanding of how it is assembled and operated will be of value to you as a reference and parts manual.

### HOW TO ORDER REPLACEMENT PARTS

The parts assembly drawings in this manual are provided as an aid in repair and replacement parts guide. Use these numbers when ordering replacement parts.

### WHO TO CONTACT FOR HELP – 800-342-7498

In event you experience trouble in assembly, operation, or in ordering parts, contact:

Dalton Ag Products, Inc.  
Customer Service Department  
Lenox, IA. 50851

## IMPLEMENT SAFETY

In addition to design and configuration of equipment, safety and accident prevention are dependent upon the awareness, concern and proper training of personnel involved in the operation, transport, maintenance, and storage of equipment. Failing to follow these safety messages can result in machine damage, property damage, personal injury, and/or death.

- Before operating your applicator, thoroughly read and understand your operator's manual. If you do not understand any portion of the operators manual, contact Dalton Ag Products distributor immediately for clarification.
- Furnish this manual to a new operator.
- Tow with tractor only. Never transport applicator unit in excess of 20 MPH. Maintain a safe speed.
- Use a Slow-Moving-Vehicle (SMV) emblem when transporting.
- Be sure safety decals are readable. All safety related decals must be replaced if the applicator is painted or the decals are otherwise rendered unreadable.
- Install transport link before transporting.
- Always check for overhead obstacles in transporting applicator and before folding or unfolding the wings of the unit.
- Never permit riders on the applicator or tractor.
- Proceed slowly on rough or slippery roadways, on side hills, and around curves to avoid tipping.
- Reduce speed when approaching ditches and corners. Do not make sharp turns with brakes.
- Machinery should be operated only by persons familiar to the tractor, applicator unit, and the safety related items.
- Do not stand on, or straddle tongue when unhitching.
- Do not modify, or permit anyone to modify, this applicator, and any of its components, without first consulting Dalton Ag distributor.
- Do not lubricate, adjust, or repair when applicator unit is in motion.
- Use only approved replacement parts.
- To prevent serious injury from high-pressure fluid, NEVER attempt to inspect, service, or disassemble any part of the hydraulic system until all pressure is relieved by lowering the toolbar to the ground (or secure with cylinder transport stops provided).
- High-pressure fluid is nearly invisible, but has enough force to penetrate the skin. Never use the hands to search out a suspected leak. If injured by escaping fluid obtain medical attention at once to minimize chance of infection. Wear safety glasses or goggles to avoid eye injury when working on the hydraulic system.
- Always check torque on wheel bolts before transporting.

